


# ► DNPH Adapter for **BiVOC2(V2)**

The DNPH adapter for easy connection of Supelco DNPH cartridges

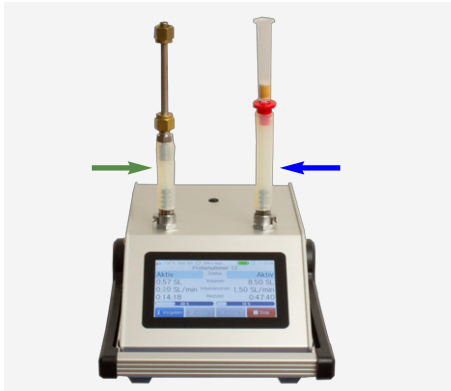

The photo shows the DNPH adapter (blue arrow) in operation on the right channel of BiVOC2V2.

The total wall thickness of 5 mm of the short hose connection keeps the cartridge in a steady position of during sampling. The TENAX adapter (green arrow) is connected to the left channel. Both adapters are sized such that the air inlets are at the same height.



The hose delivered with BiVOC2V2 can be connected to the outlet of the sound suppressor to increase the distance between air inlet and outlet of the sampling air nearly indefinitely.



The DNPH adapter fits perfectly into one of the holes of the foam insert of the handling case for transportation.

The additional cap prevents foreign objects from entering the adapter.

## Technical Data:

Connection to Pump	Metal hose nipples, Type MC2203
Connection to DNPH Cartridge	Cartridge Adapter 21018-U
Length	110 mm
Weight	25 g
Article Number	02-398



**holbach**  
UMWELTANALYTIK

Umweltanalytik Holbach GmbH  
Sperberweg 3 D-66687 Wadern

[www.holbach.biz](http://www.holbach.biz)  
[info@holbach.biz](mailto:info@holbach.biz)